USER'S GUIDE

V:1623-0609-11

IHP211B

Home Music System for iPod + iPhone

For the most up-to-date version of this User's Guide, go to **www.ilive.net**

Warnings and Precautions

- **CAUTION**: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- ***PRÉCAUTION:*** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** The battery, batteries, and battery pack shall not be exposed to excessive heat such as sunshine, fire, or the like.
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

- **WARNING**: Shock hazard - Do Not Open.
- ***AVIS****: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR*

Mains Plug or Direct plug-in adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the Mains Plug or Direct plug-in adapter should be disconnected from the mains socket outlet completely.

La fiche d'alimentation ou adaptateur de courant est utilisé comme dispositif de déconnexion et doit rester accessible pendant l'utilisation. Pour mettre l'appareil hors tension, la fiche ou adaptateur de courant doit être débranché de la prise de courant.

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
No mezcle baterías viejas y nuevas.
No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Special note: When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
  L'appareil ne doit pas être exposé Line In écoulements ou Line In éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
  Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the rear or bottom of the apparatus.
  Attention marquage est situé sur le paneau arrière ou inférieur de l'unité.
- The marking information is located at the rear or bottom of apparatus.
  Le marquage est situé sur le paneau arrière ou inférieur de l'unité.

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

Home Music System for iPod + iPhone

Features

- Made for iPod and iPhone
- Plays and charges docked iPod and iPhone
- CD player: CD, CD-R/RW
- FM Radio (PLL)
- Station memory presets (20 FM)
- DBBS: Dynamic Bass Boost System
- iPhone authentication IC
- Top-load disc player
- 3.5mm audio input
- Auto time sync with iPhone
- Digital volume control
- Last user's setting memory
- Full-function remote
- LCD display with blue backlight
- Dimmer control
- Digital clock
- Single alarm
- Wake to iPhone, CD, radio, and alarm
- DC power input: requires an AC/DC power adapter (included)

Included

- Remote control: requires 1 CR2025 battery (pre-installed)
- 2 rubber spacers
- AC/DC power adapter

Table of Contents

Home Music System for iPod + iPhone 4
- Features
- Included

Table of Contents 5

Introduction 6

Setup 8
- Power
- Remote
- Backup Battery

iPod and iPhone 9
- Docking an iPod or iPhone
- Playing a Docked iPod or iPhone
- Auto Time Sync with iPod or iPhone

CD 10
- Loading a CD
- Playing a CD
- Programming a CD

FM Radio and 3.5mm Audio Input 11
- Tuning the FM Radio
- Saving a Station as a Preset
- Tuning Preset Radio Stations
- 3.5mm Audio Input

Company Information 12
- International Support
- Contact Information
- Green Initiative

Introduction

Clock/Memory
With the power off, press to begin setting the clock. In FM Radio mode, press to save the current station as a preset.

DBBS
Press to activate the Dynamic Bass Boost System.

Power
Press to power the music system off or on.

Stop/Dimmer
Press to stop a CD during play. With the power off, press and hold to adjust the brightness of the display.

Volume
Press to adjust the volume.

Snooze/Sleep
After the alarm sounds, press to delay the alarm for an additional 9 minutes. In iPod, Line In, FM Radio, or CD modes press repeatedly to set the sleep timer.

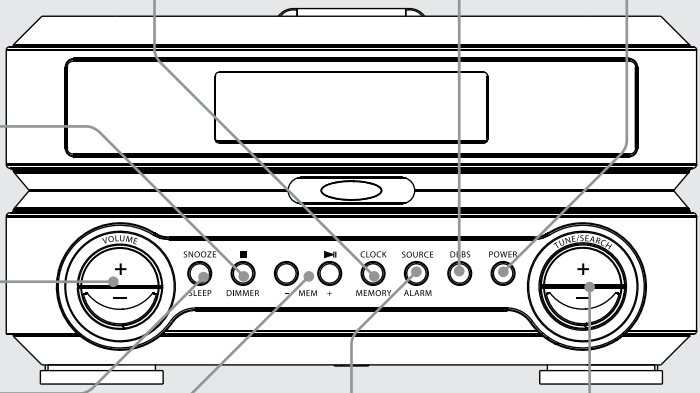

Play/Pause/Mem ±
Press to play or pause a docked iPod or iPhone, or loaded CD.. In radio mode, press to cycle through preset radio stations.

Source/Alarm
Press to adjust the source to iPod, Line In, FM Radio, or CD. With the power off, press and hold to begin setting the alarm, or press to activate or deactivate the set alarm.

Tune/Search
Press to adjust the FM radio station. Press to skip between tracks on a loaded CD or docked iPod or iPhone. Press and hold to search through an individual track.

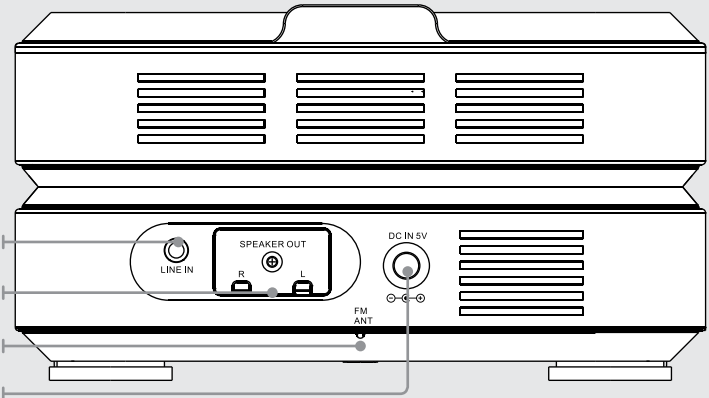

3.5mm Audio Input

Speaker Output

FM Wire Antenna

DC Power Input

Source/Clock
Press to adjust the source to iPod, Line In, FM Radio, or CD. With the power off, press to begin setting the clock.

Power
Press to power the music system off or on.

Play/Pause
Press to play or pause a docked iPod or iPhone, or loaded CD.

Menu
Press to cycle between menus on a docked iPod or within the iPod app on a docked iPod touch or iPhone.

Arrows (▲▼)

Enter
Press to make selections on a docked iPod or iPhone.

Repeat/Shuffle
Press repeatedly to set the repeat and shuffle options on a loaded CD or docked iPod or iPhone.

Memory
In FM Radio mode, press to begin saving the current station as a preset.

Mem ±
In FM Radio mode, press to cycle through preset radio stations.

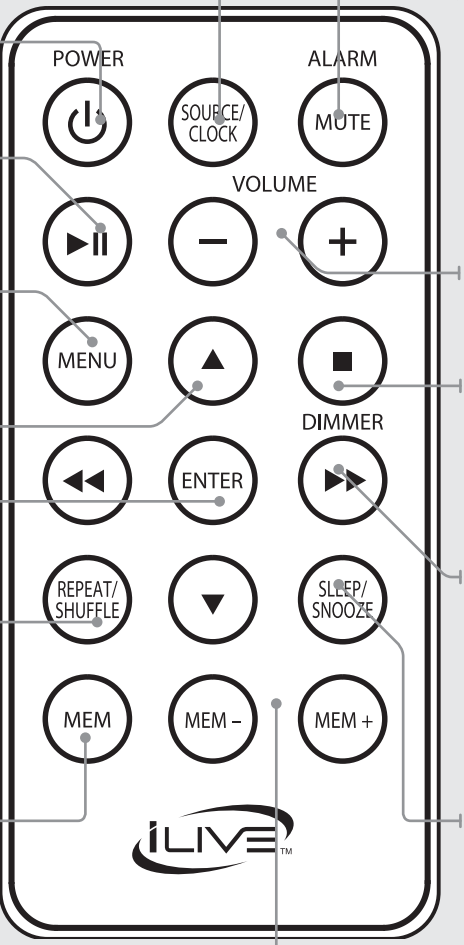

Alarm/Mute
With the power off, press and hold to begin setting the alarm, or press to activate or deactivate the set alarm. In iPod, Line In, FM Radio, or CD modes press to mute the volume.

Volume
Press to adjust the volume.

Stop/Dimmer
Press to stop a CD during play. With the power off, press and hold to adjust the brightness of the display.

Tune/Search
Press to adjust the FM radio station. Press to skip between tracks on a loaded CD or docked iPod or iPhone. Press and hold to search through an individual track.

Snooze/Sleep
After the alarm sounds, press to delay the alarm for an additional 9 minutes. In radio, iPod, or Line In modes press repeatedly to set the sleep timer.

Setup

Power

DC power input: requires an AC/DC power adapter (included)

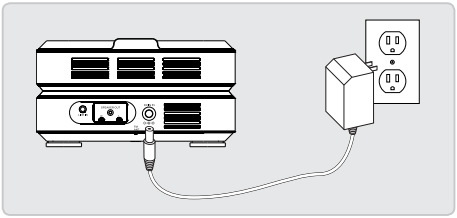

Remote

Requires 1 CR2025 battery (pre-installed)

WARNING: The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste.

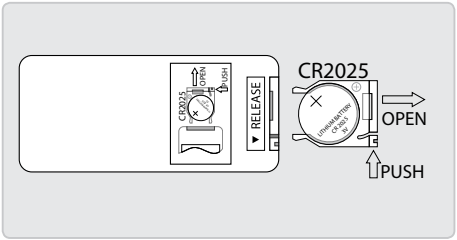

Backup Battery

Requires 2 AAA batteries (not included)

The battery backup is designed for short-term unexpected power outages. Under these circumstances, the time and alarm settings will be saved. The music system cannot power primary functions such as the radio or playing a docked iPod off of the battery backup alone.

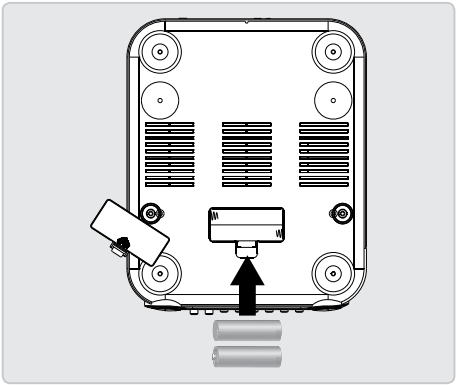

iPod and iPhone

Docking an iPod or iPhone

1. Attach the included rubber spacers to the back of the dock as needed to properly support your iPod or iPhone model.
2. Connect the iPod or iPhone to the connector inside the Dock for iPod and iPhone.
3. When the dock is plugged in, using AC power, the docked iPod or iPhone will charge.

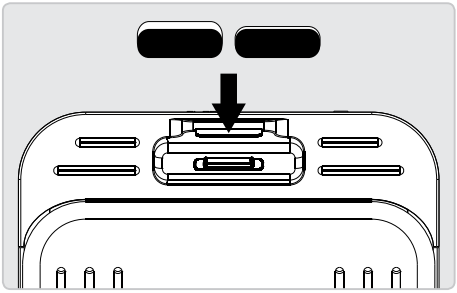

Playing a Docked iPod or iPhone

1. Follow the instructions for Docking an iPod or iPhone.
2. Press the **Source** button to switch to iPod mode.
3. Press the **Play/Pause** button to begin playing the docked iPod or iPhone.

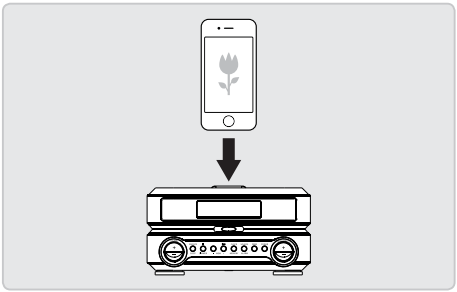

Auto Time Sync with iPod or iPhone

1. Press the **Power** button to turn the clock radio off.
2. Follow the instructions for Docking the iPod or iPhone.

   Auto time sync will not work with all iPods.
3. When an iPod or iPhone is docked with the clock, the clock will automatically synchronize it's time with the docked iPod or iPhone.
4. If the clock does not automatically sync, press and hold the **Clock** button for 3 seconds to manually sync the clock with the docked iPod or iPhone.

CD

Loading a CD

1. Press the **Open** button on the top of the music system to open the CD door.
2. Load a CD into the music system, label side facing up.
3. Close the CD door.

Playing a CD

1. Follow the instructions for Loading a CD.
2. Press the **Power** button to power the music system on.
3. Press the **Source** button to switch to CD mode.

   The track number will appear on the display, to the right of the time, when the music system is in CD mode.
4. Press the **Play/Pause** button to begin playing the loaded CD.

Programming a CD

1. Follow the instructions for Loading a CD and Playing a CD.
2. With the CD stopped, press the **Memory** button once.

   "P01" will appear on the display.
3. Press the **Skip/Search** buttons to select a CD track. Press the **Memory** button to save the CD track to the program.
4. Repeat steps 2 and 3 to program all desired tracks.
5. Press the **Play/Pause** button to begin playing the programmed CD.

   Tracks will play in the order they were programmed.
6. Press the **Stop** button to cancel the program.

FM Radio and 3.5mm Audio Input

Tuning the FM Radio

1. Press the **Source** button to switch to FM Radio mode.
2. Use the **Tuning/Search** buttons to tune the FM radio.

Saving a Station as a Preset

1. Follow the instructions for Tuning the FM Radio.
2. Tune to the desired station.
3. Press the **Memory** button.

   A preset number will appear on the display.
4. Press the **Mem ±** buttons to adjust to the desired preset number.
5. Press the **Memory** button to save the current radio station to the selected preset.

Tuning Preset Radio Stations

1. Follow the instructions for Tuning the Radio and Saving a Station as a Preset.
2. Press the **Mem ±** buttons to cycle through preset radio stations.

3.5mm Audio Input

Requires a 3.5mm line input cable (not included)

1. Connect a line input cable to the **3.5mm Audio Input** and an MP3 player.
2. Press the **Power** button to turn the clock radio on.
3. Press the **Source** button repeatedly to switch to Line In mode.
4. Use the native controls on the connected MP3 player to play audio through the clock radio.

Company Information

International Support

To download this User's Guide in English, Spanish, or French, visit the support section at www.ilive.net.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.ilive.net.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.ilive.net.

Contact Information

Phone: 1-888-999-4215
Email: customerservice@ilive.net
Parts Email: partsinfo@dpi-global.com
Website: www.ilive.net

Green Initiative

Environmental Commitment to 'Protect for Today and Sustain for Tomorrow'

2009 marked the official launch of DPI, Inc.'s corporate campaign for a greener and cleaner world. DPI is building upon environmental initiatives introduced at all of their facilities to help formulate and sustain significant and important conservation efforts within its manufacturing and marketing communities. In addition to targeting and selecting energy efficient product features, and structuring 'green office' procedures, other initial program efforts include:

- Reduction of all packaging sizes
- Recyclable plastics for clamshell packages, with a plan to eventually replace plastic with recyclable paper
- Recycled fiber board in place of the polyfoam in packing boxes
- Recycled plastics in place of the virgin material in product construction

Copyright © 2011 Digital Products International (DPI, Inc.) | All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice